




OPEN LEFT

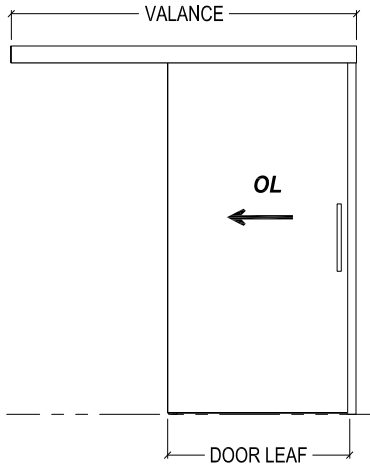

OPEN RIGHT

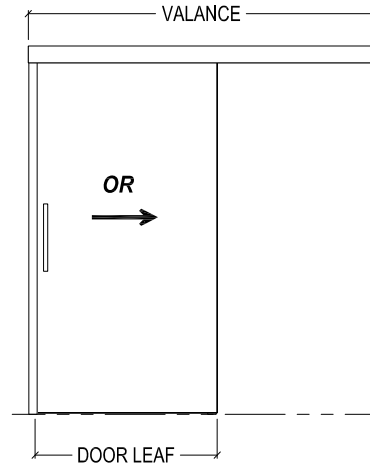

OPEN RIGHT SHOWN

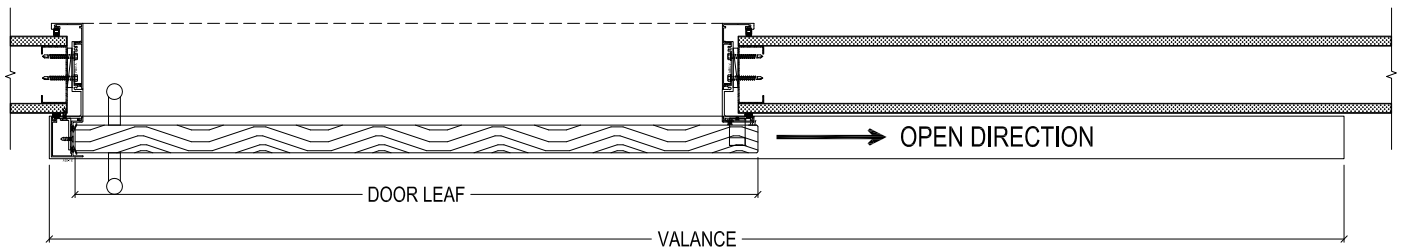

VALANCE SIDE

ATTENTION CUSTOMER:

To ensure the accuracy of your door machining, please read and understand the door handing information below. If you have any questions, please contact your AD Systems Project Manager.

Door is always viewed from valance side for handing purposes.
Standard layout shows valance side is outside & non valance side is room side.

"OL" = OPEN LEFT
"OR" = OPEN RIGHT

Standard Hardware Configurations: (If equipped)
Thumb-turn lever always on room side and keyed cylinder always on valance side ★

NOTE:

★ Any door that is to be configured opposite of the standards above must be indicated by an "R" for reverse.
"OL-R" = OPEN LEFT - REVERSE
"OR-R" = OPEN RIGHT - REVERSE



Innovation behind every door
www.specADsystems.com
1.425.374.1360

AD SYSTEMS
Barn Door Handing Guide